 


USER MANUAL



Components and Function

1. Powering On

Press and release button while holding the detector away from any metallic objects. You will hear 1 beep.


2. Three Alarm Mode Switching

- Power on, initial mode is sound and vibration
- Short press the switch to switch to vibration mode. **(Vibration Mode)**
- Short press on the switch again to change to sound mode. **(Sound Mode)**
- Short press the switch again to return to the initial mode. **(Sound & Vibration Mode)**

3. Powering Off

Press the switch for one second for power off. You will hear 1 beep.

USER MANUAL

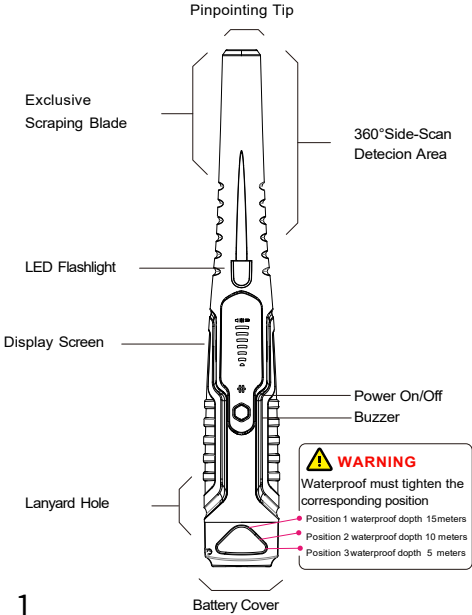

Battery Replacement

Power level below 6V will automatically shut down. Replace the 9V battery as soon as possible.

Replacement Step

- Simply rotate battery cover counterclockwise to remove and clockwise to tighten by hand.
- The metal detector front itself, the left side is the negative pole, the right side is the positive pole, please install the 9v battery correctly.
- Remove the battery when the unit is to be stored more than 30 days.

50FT WATERPROOF DEPTH

made in china



Please Notes:

Before using this device into water, you must make sure battery cover is tight and sealed. So as not to damage machine.

Main Features:

- *50Ft waterproof depth.
- Screen display signal level.

Specifications:

Indicators: Proportional audio/vibration pulse rate
Control: Power switch
Frequency: 10kHz
Dimensions: Length: 29.5 cmL
Weight: 200g
Battery: Single 9V
Warranty: One Year, Limited Parts/Labor

USER MANUAL

